LineLED Wet 24V - Installation Instructions

Models LL9-

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. ENSURE POWER IS OFF AT FUSE BOX PRIOR TO INSTALLTION TO PREVENT ELECTRICAL SHOCK.
3. USE ONLY WITH CLASS 2 POWER UNIT.
4. SUITABLE FOR DAMP LOCATIONS.
5. FOR UNDER CABINET OR SHELF MOUNT.
6. CONFORMS TO UL STD 2108. CERTIFIED TO CSA STD C22.2 NO.250.0.

c UL us LISTED

REV0.3
01272026


optic arts by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Attention: Always test LineLED operation before installing. Connect LineLED to power supply to ensure it is working properly and no damage has occured during shipping.

1

1.1 Clean the area throughly where the LineLED will be installed.

Remove the paper backing from the LineLED and firmly press down making sure there are no air bubbles that can cause surface irregularities. **Do not remove the adhesive! Removing the adhesive may cause arcing of the Line LED tape!**

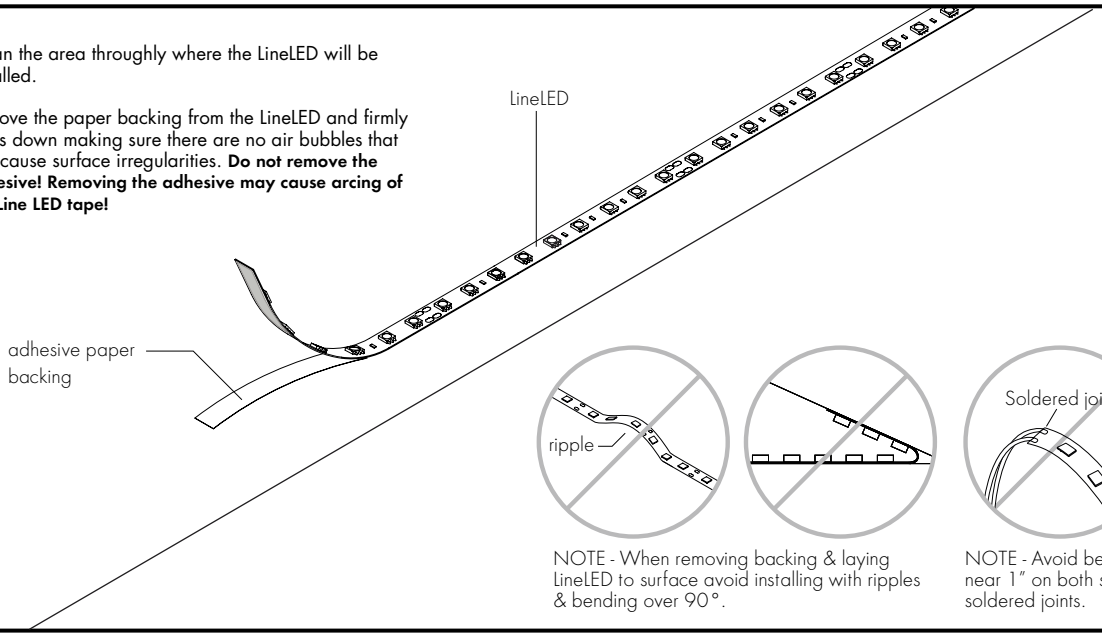


NOTE - When removing backing & laying LineLED to surface avoid installing with ripples & bending over 90°.

NOTE - Avoid bending near 1" on both side of the soldered joints.

2

2.1 If length of LineLED needs to be adjusted on site, simply cut the LED strip in between solder pads. Always cut from end with no connector / wire leads.

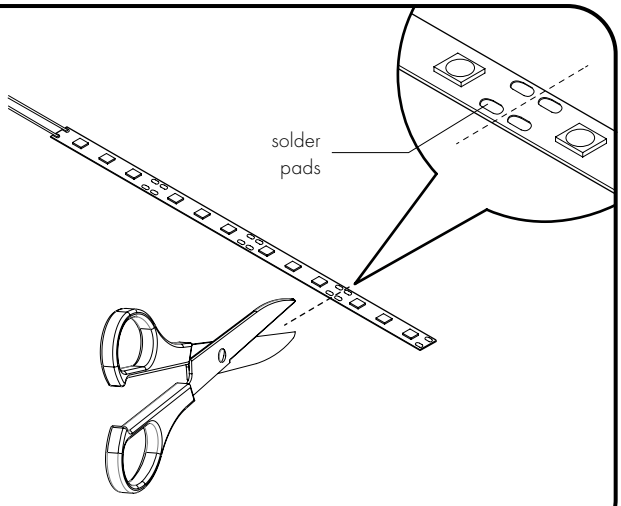

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

LineLED Wet 24V - Installation Instructions

Models LL9-

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. ENSURE POWER IS OFF AT FUSE BOX PRIOR TO INSTALLTION TO PREVENT ELECTRICAL SHOCK.
3. USE ONLY WITH CLASS 2 POWER UNIT.
4. SUITABLE FOR DAMP LOCATIONS.
5. FOR UNDER CABINET OR SHELF MOUNT.
6. CONFORMS TO UL STD 2108. CERTIFIED TO CSA STD C22.2 NO.250.0.

c UL us LISTED

REV0.3
01272026

optic arts by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


3

3.1 Place the strain relief in desired place. Make sure it is 3" away from the end of the strip.


3.2 Slide the ziptie through strain relief opening.

3.3 Lay wire lead on top of strain relief.

3.4 Tighten zip tie around lead wire. Cut off excess zip tie.

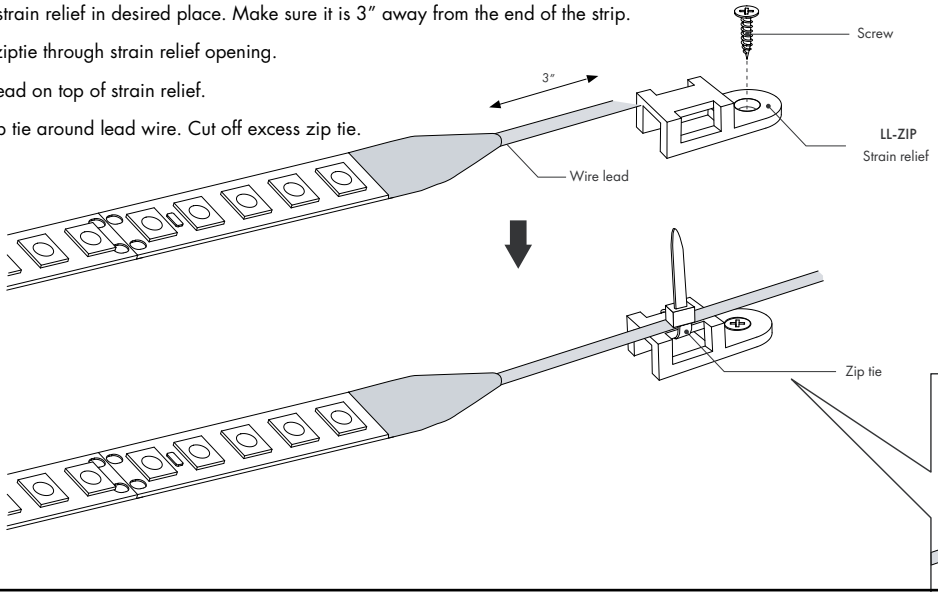

4

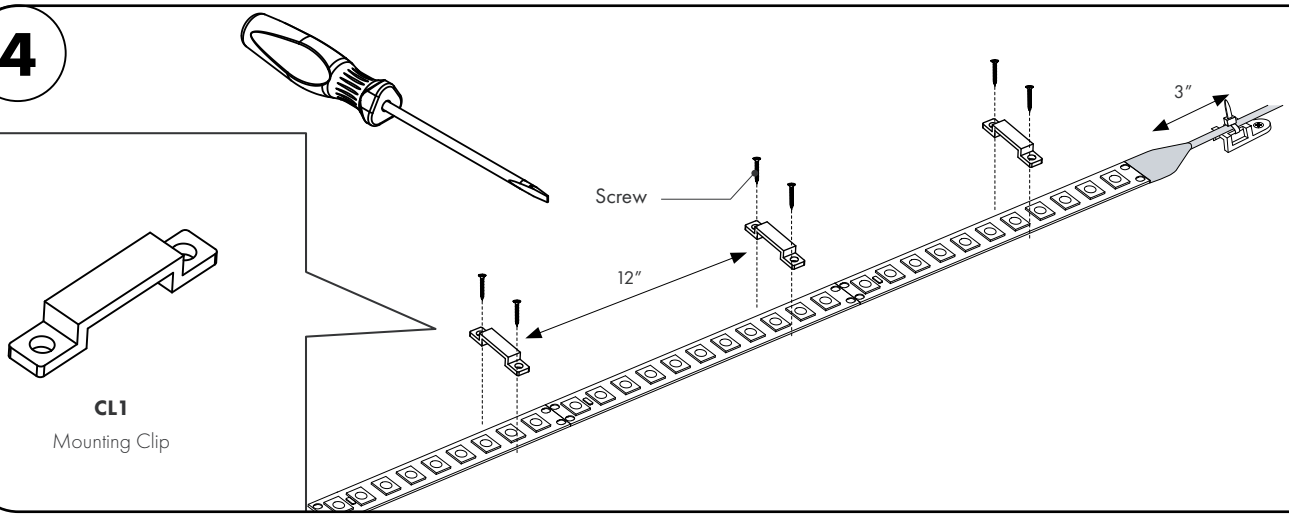


CL1
Mounting Clip

5

RECOMMENDED LAYOUT FOR MULTIPLE ADJACENT RUNS OF LINELED FED WITH SEPARATE POWER SUPPLIES

Position power supplies either in the middle of two runs or at the opposite ends.

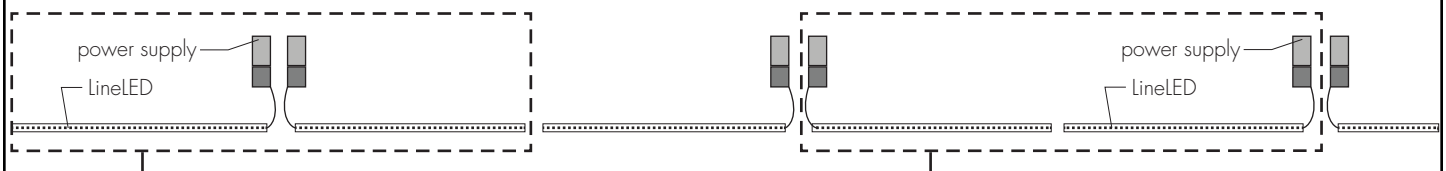

power supplies placed in the middle of two adjacent runs

power supplies placed at the opposite ends of two adjacent runs

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. ENSURE POWER IS OFF AT FUSE BOX PRIOR TO INSTALLTION TO PREVENT ELECTRICAL SHOCK.
3. USE ONLY WITH CLASS 2 POWER UNIT.
4. SUITABLE FOR DAMP LOCATIONS.
5. FOR UNDER CABINET OR SHELF MOUNT.
6. CONFORMS TO UL STD 2108. CERTIFIED TO CSA STD C22.2 NO.250.0.

optic arts by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Power Supply Wiring Diagram

Note: *Prior to installation all 24VDC wires must be present near fixture. Refer to the power supply installation instructions for additional information.*

Static White
Wiring Diagram PDF