Kurat - Installation Instructions


Models KUR-XX-R

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

REV0.2
01272026

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

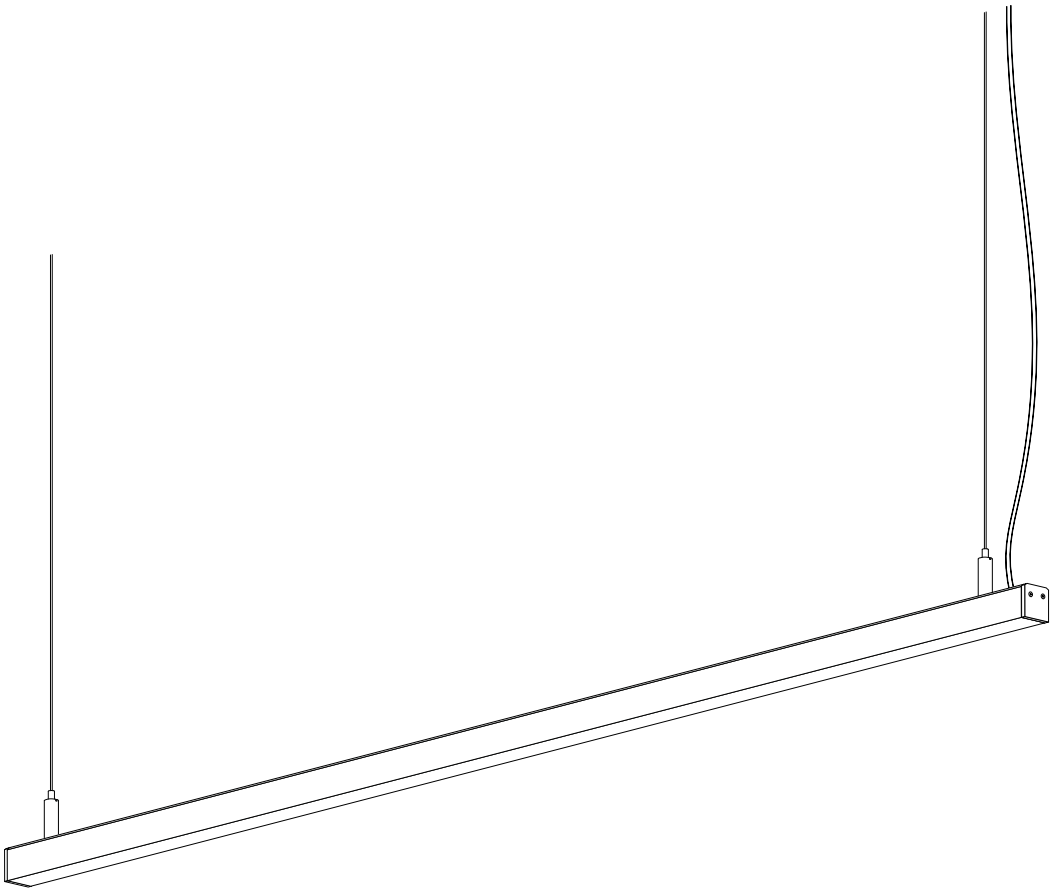

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE


Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Remote Power Supply


1

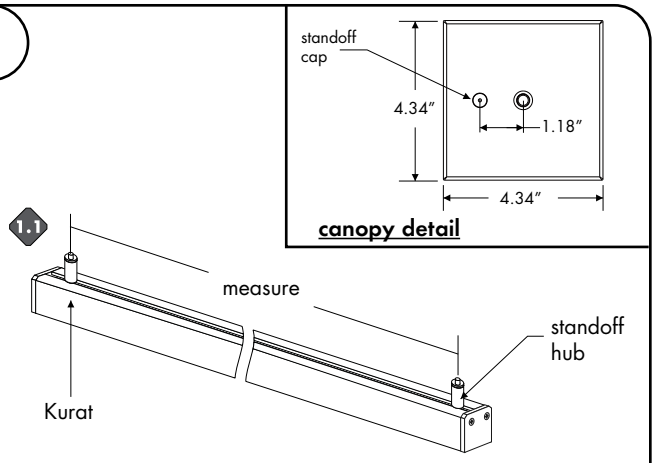

***Note:** Prior to installation all 24VDC wires must be present in junction box. Refer to the power supply installation instruction for additional information.*
Note: More than one person is recommended for this installation.

1.1 Align one standoff hub to the junction box & measure the distance from standoff hub to the other hub. Then mark this location to the ceiling. Make addition marks if using more than one standoffs. Use canopy detail to slighting off center standoff hub.

2

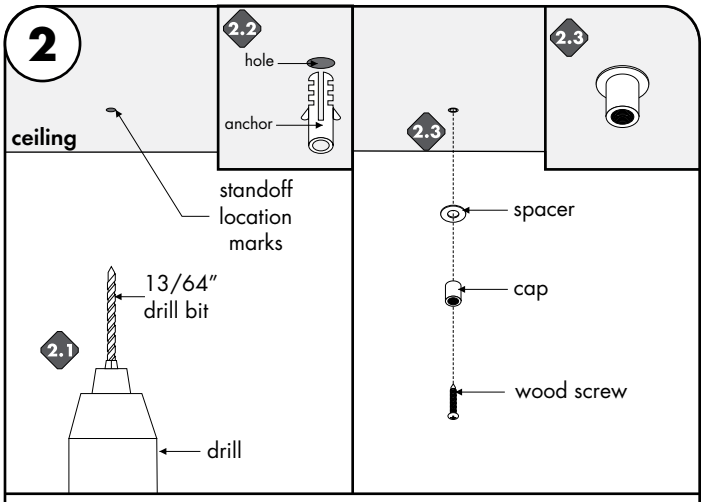


2.1 On the marked location(s), make a hole using a 13/64″ drill bit.

2.2 Insert the anchor into the hole and push completely in.


2.3 Insert wood screw through cap & washer and then tighten to secure into the anchors.

3

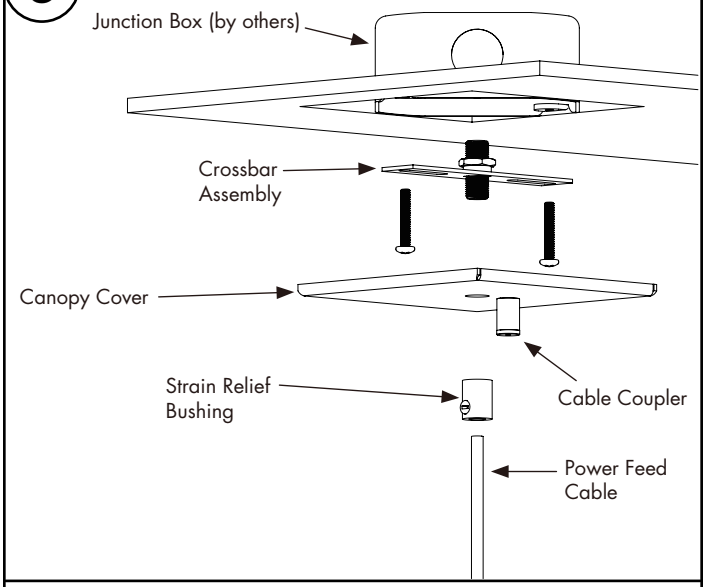

3.1 Route the power feed cable through the strain relief bushing, canopy cover., and crossbar assembly

4

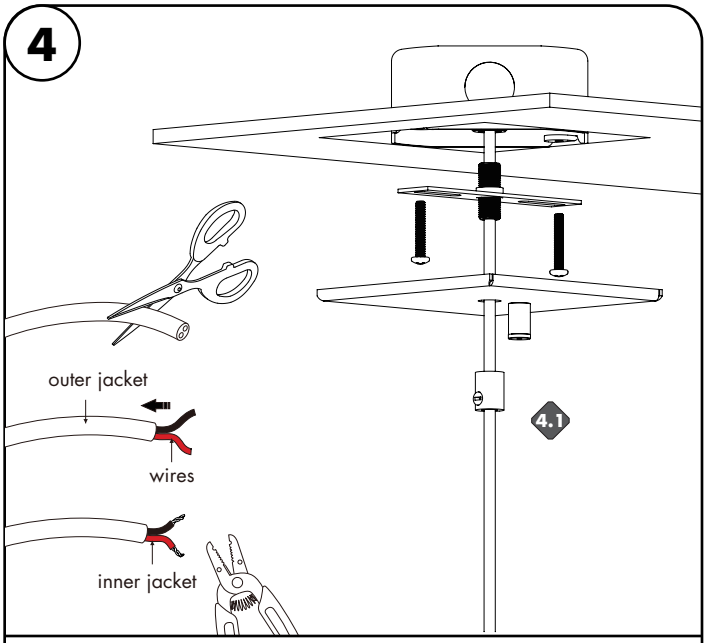

***Note:** Prior to installing fixture to power, cable must be prepared to go inside crossbar assembly. If this step is skipped metal sleeve will tangle up.*

4.1 Connect power feed cable wires, per image above, to wires from the power supply. Insert terminations into the junction box.


Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


Remote Power Supply

5

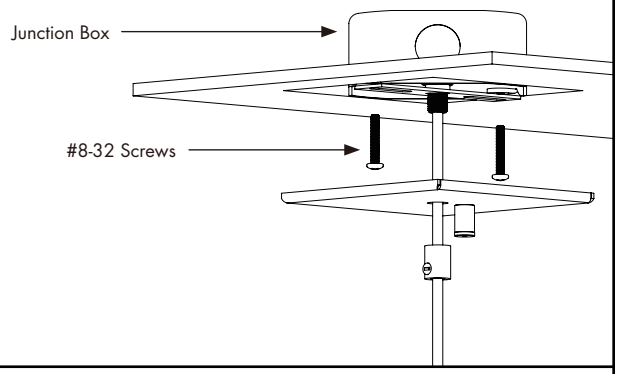

5.1 Align the crossbar to the junction box holes, and secure using the provided two #8-32 screws.


6

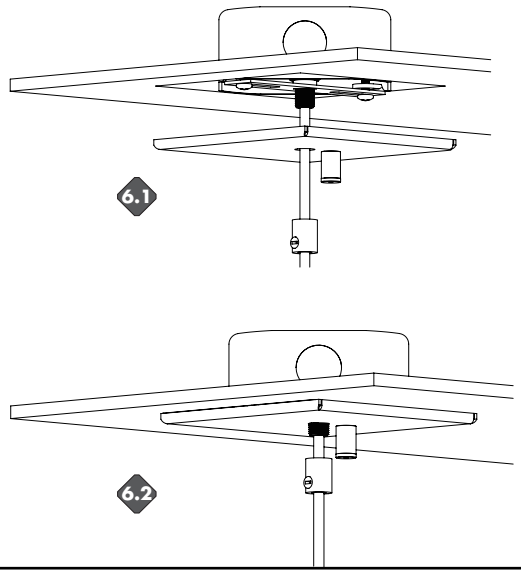

6.1 Slide the canopy cover up to the crossbar and secure by threading the strain relief bushing onto the crossbar assembly.

6.2 Tighten the set screw on the strain relief bushing to secure the position of the power cable.

7

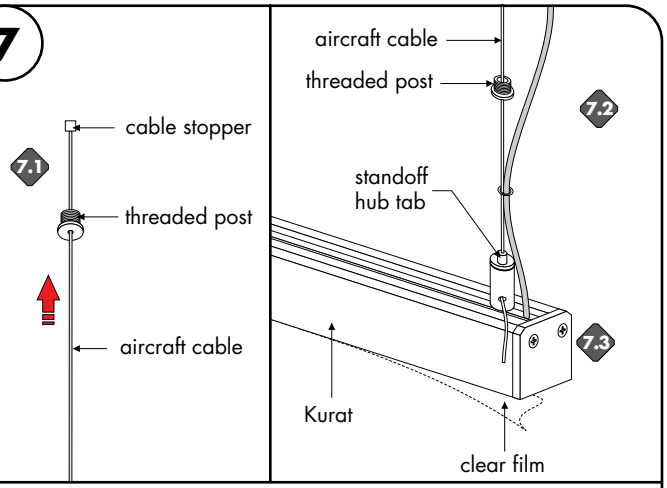


7.1 Untangle each aircraft cable and insert into the threaded post until the cable stopper.

7.2 Push on the standoff hub tab and feed the aircraft cable into the standoff hub until necessary. Release tab to secure in place. For the aircraft cable closest to the coaxial cable slide through the o-rings on the coaxial cable first.

7.3 Remove the clear protective film from the face of the lens.

8

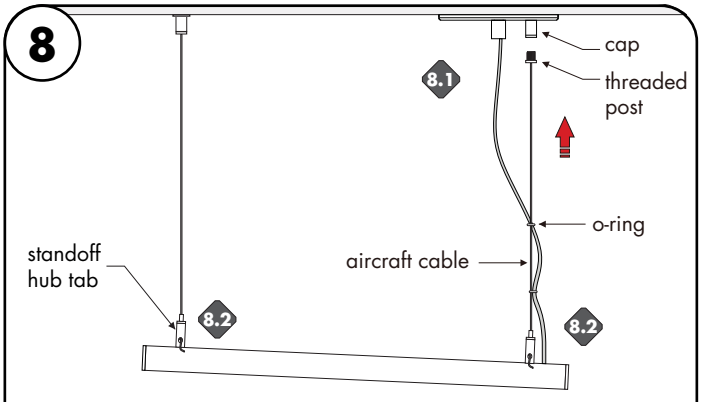

8.1 Tighten each threaded post into a cap, one will be on the backplate and other(s) on the ceiling. If fixture not leveled, adjustments can be made by pushing on the standoff hub tab. Then either feed more cable into the standoff hub or pull out cable from the standoff hub and release to secure.

8.2 Cut off any extra aircraft cable from the standoff hub hole


*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Remote Power Supply

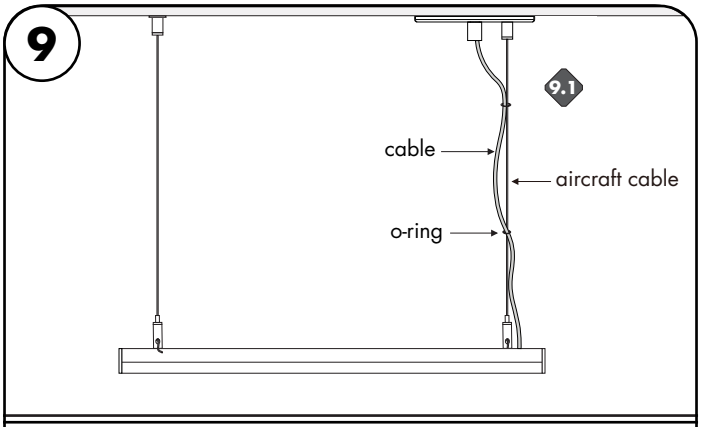

9.1 If necessary make any final adjustments to the cables use the o-rings for a cleaner look.

Kurat - Installation Instructions

Models KUR-XX-R

Please read all instructions prior to installation and keep for future reference!


1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

REV0.2
01272026


luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

120V AC Integral Power Supply

1

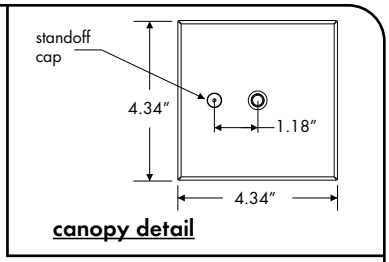


canopy detail

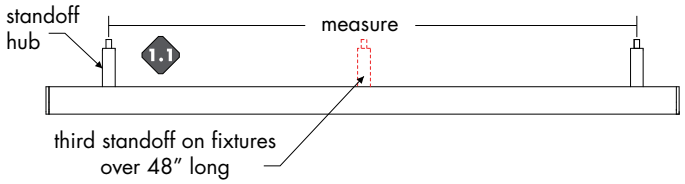

Note: More than one person is recommended for this installation.

1.1 Determine length from the canopy to the standoff hub. Then mark this location to the ceiling. Make additional marks if using more than one standoffs. Use canopy detail to slighting off center standoff hub.

2

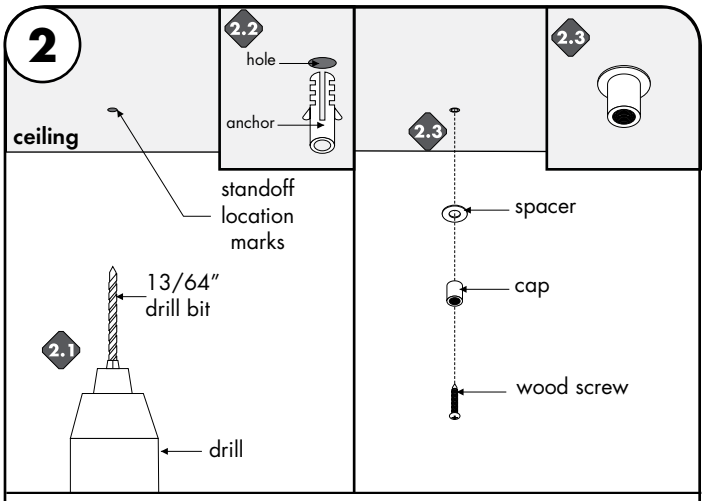


2.1 On the marked location(s), make a hole using a 13/64" drill bit.


2.2 Insert the anchor into the hole and push completely in.

2.3 Insert wood screw through cap & washer and then tighten to secure into the anchors.

3

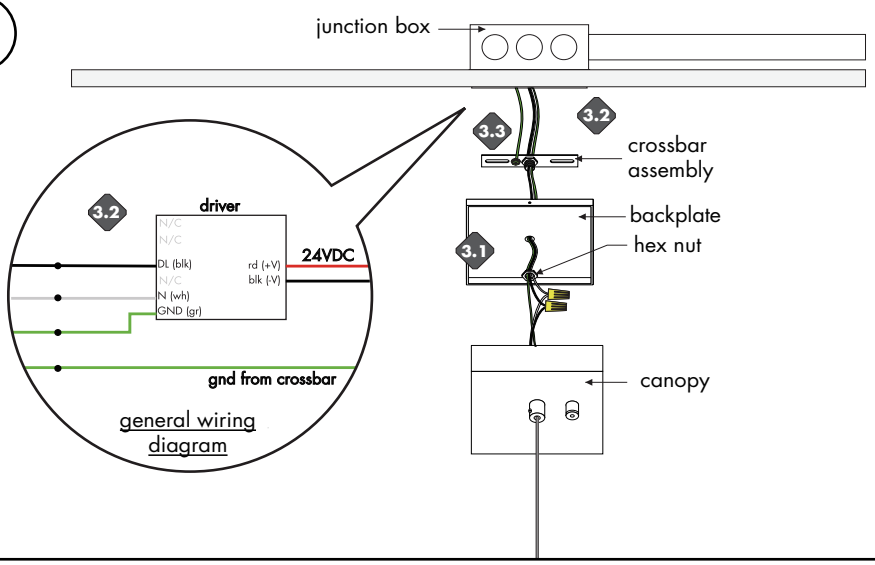

Note: Prior to installing fixture to power, cable must be prepared to go inside crossbar assembly. If this step is skipped metal sleeve will tangle up.

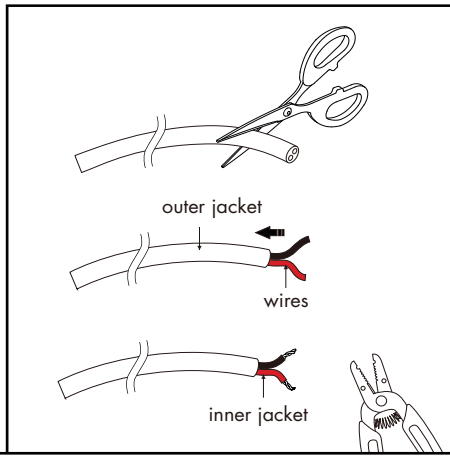

3.1 Insert the power wires into the crossbar assembly, backplate, and hex nut.

3.2 Refer to the wiring diagram and make all necessary connections from the power wires to the canopy driver wires.

3.3 Connect to ground in accordance with local electrical codes.

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE


Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


120V AC Integral Power Supply

4

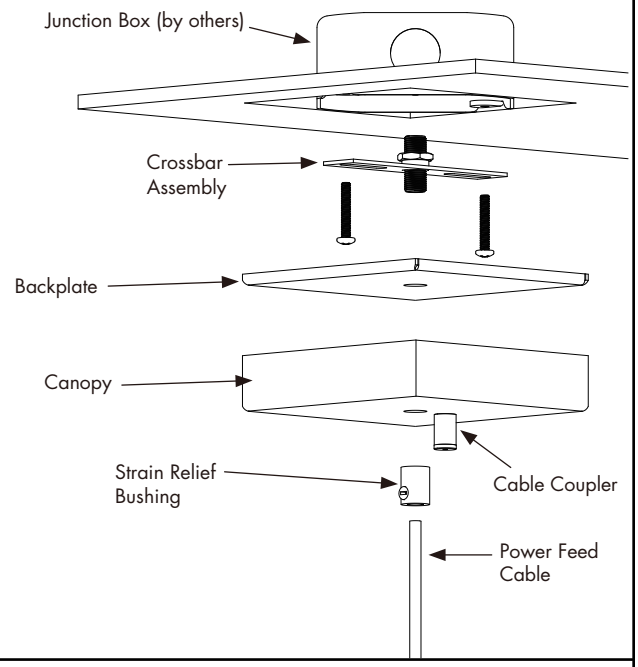


4.1 Route the power feed cable through the strain relief bushing, canopy cover., and crossbar assembly

5

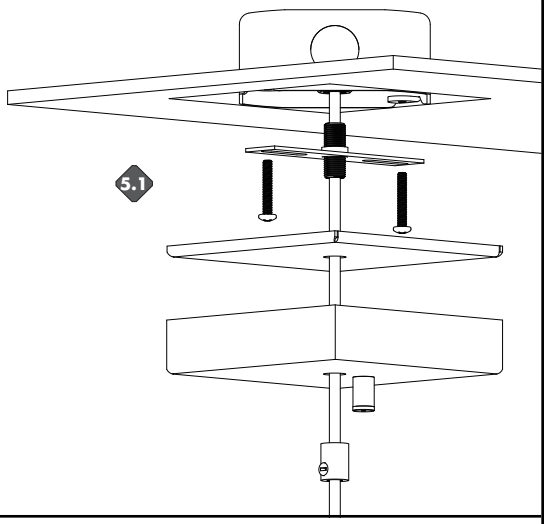


5.1 Connect power feed cable wires, per image above, to wires from the power supply. Insert terminations into the junction box.

6

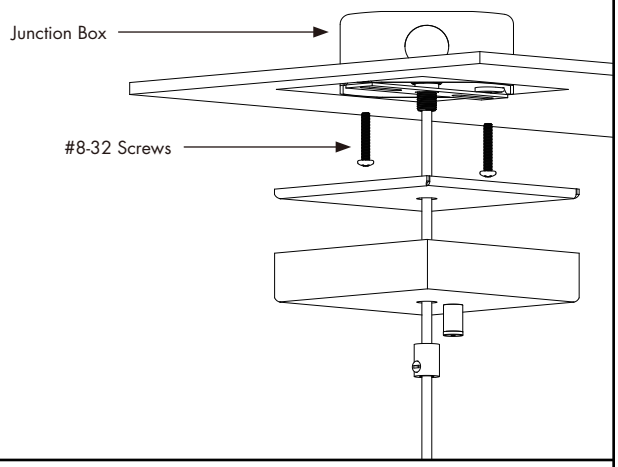

6.1 Align the crossbar to the junction box holes, and secure using the provided two #8-32 screws.

7

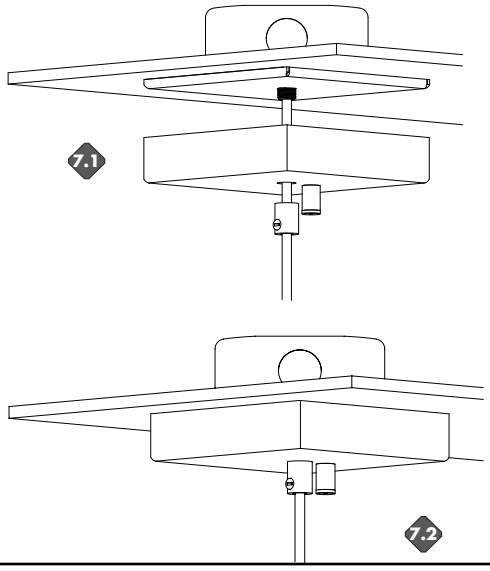

7.1 Slide the canopy cover up to the crossbar and secure by threading the strain relief bushing onto the crossbar assembly.

7.2 Tighten the set screw on the strain relief bushing to secure the position of the power cable.


*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


120V AC Integral Power Supply

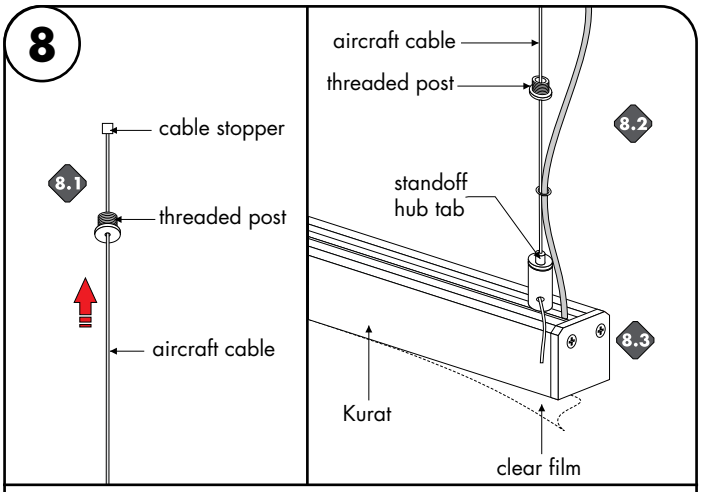

8.1 Untangle each aircraft cable and insert into the threaded post until the cable stopper.

8.2 Push on the standoff hub tab and feed the aircraft cable into the standoff hub until necessary. Release tab to secure in place. *For the aircraft cable closest to the power cable slide through the o-rings on the power cable first.*

8.3 Remove the clear protective film from the face of the lens.

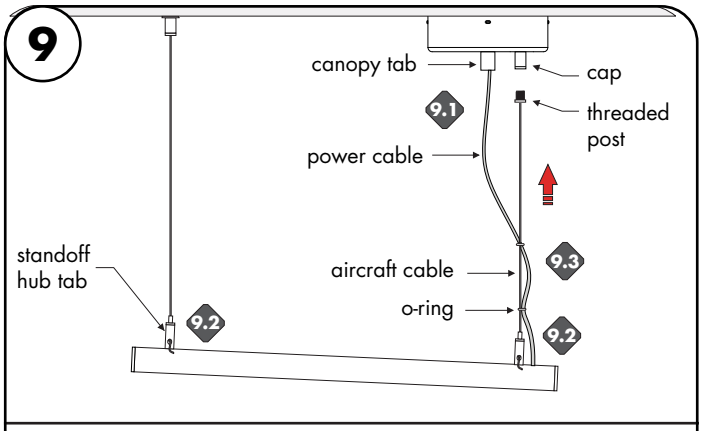

9.1 Tighten each threaded post into a cap, one will be on the canopy and other(s) on the ceiling. If fixture not leveled, adjustments can be made by pushing on the standoff hub tab. Then either feed more cable into the standoff hub or pull out cable from the standoff hub and release to secure. In addition If power wire is sagging, feed into the canopy. By pressing on the tab on the canopy and feed until necessary.

9.2 Cut off any extra aircraft cable from the standoff hub hole.

9.3 If necessary make any final adjustments to the cables use the o-rings for a cleaner look.

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Kurat - Installation Instructions

Models KUR-XX-R

Please read all instructions prior to installation and keep for future reference!


1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

REV0.2
01272026


luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

277V AC Integral Power Supply

1

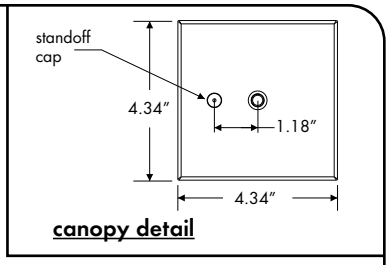


canopy detail

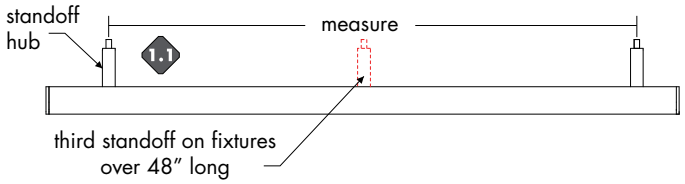

Note: More than one person is recommended for this installation.

1.1 Determine length from the canopy to the standoff hub. Then mark this location to the ceiling. Make additional marks if using more than one standoffs. Use canopy detail to slighting off center standoff hub.

2

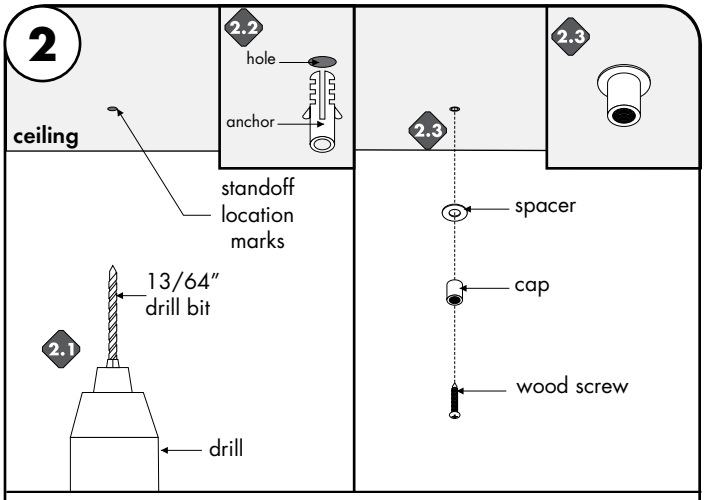


2.1 On the marked location(s), make a hole using a 13/64″ drill bit.

2.2 Insert the anchor into the hole and push completely in.


2.3 Insert wood screw through cap & washer and then tighten to secure into the anchors.

3

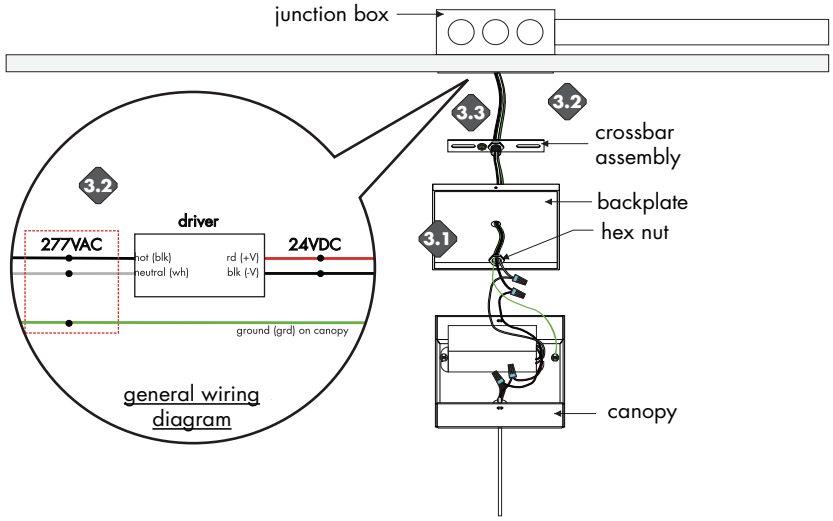

general wiring diagram

***Note:** Prior to installing fixture to power, cable must be prepared to go inside crossbar assembly. If this step is skipped metal sleeve will tangle up.*

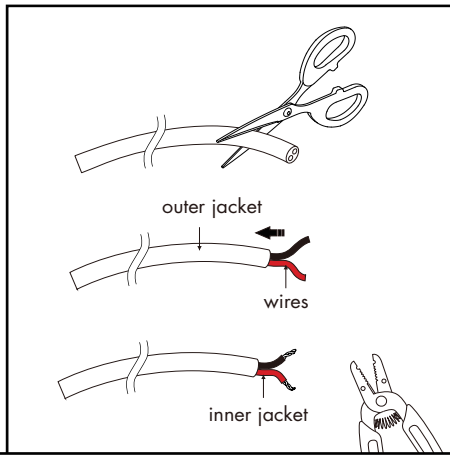

3.1 Insert the power wires into the crossbar assembly, backplate, and hex nut.

3.2 Refer to the wiring diagram and make all necessary connections from the power wires to the canopy driver wires.

3.3 Connect to ground in accordance with local electrical codes.

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE


Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


277V AC Integral Power Supply

4

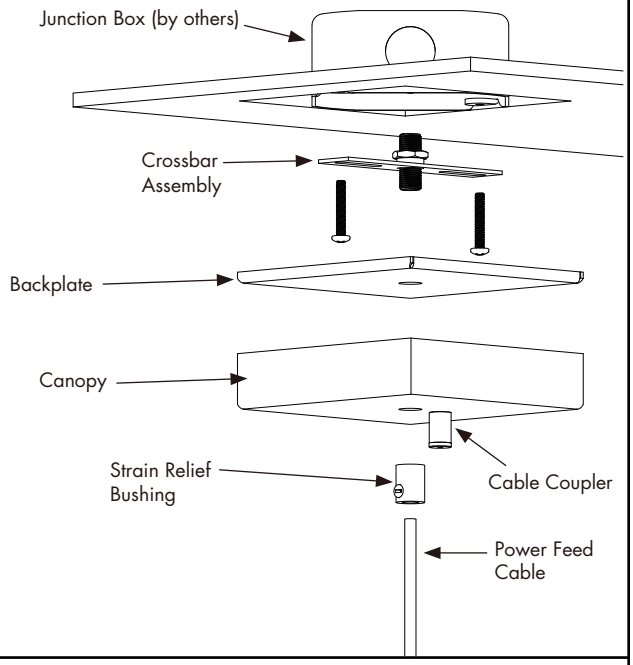


4.1 Route the power feed cable through the strain relief bushing, canopy cover., and crossbar assembly

5

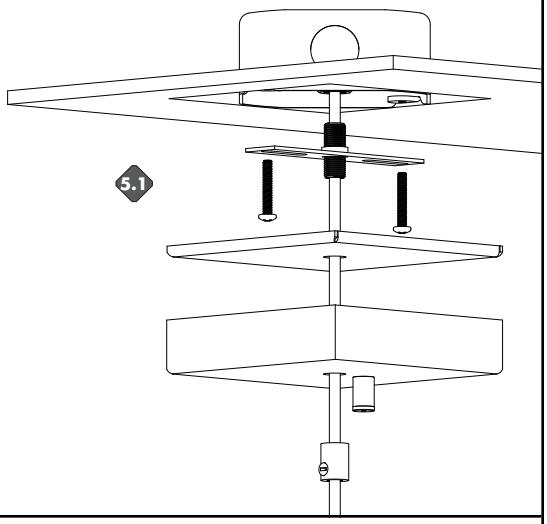


5.1 Connect power feed cable wires, per image above, to wires from the power supply. Insert terminations into the junction box.

6

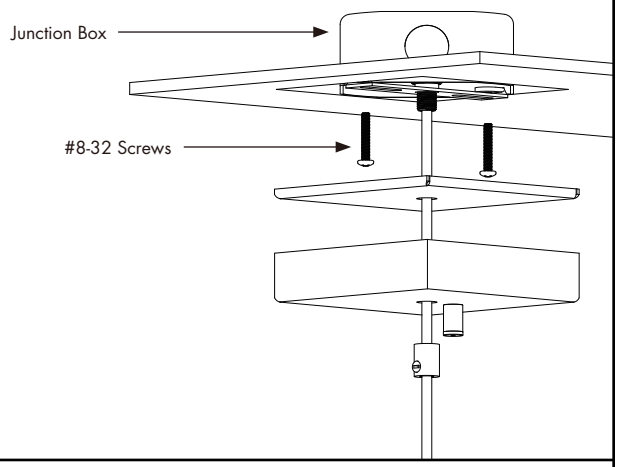

6.1 Align the crossbar to the junction box holes, and secure using the provided two #8-32 screws.

7

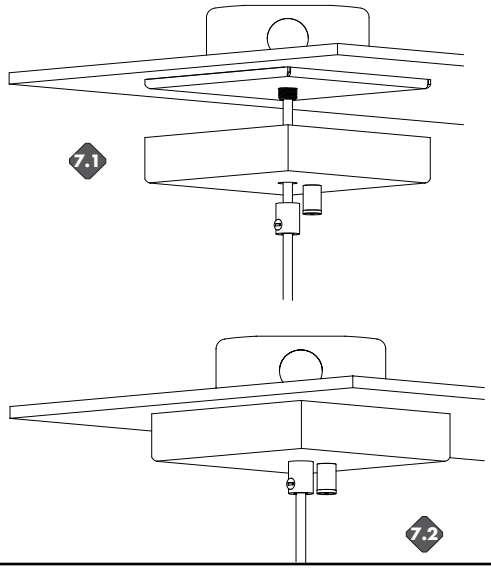

7.1 Slide the canopy cover up to the crossbar and secure by threading the strain relief bushing onto the crossbar assembly.

7.2 Tighten the set screw on the strain relief bushing to secure the position of the power cable.


*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


277V AC Integral Power Supply

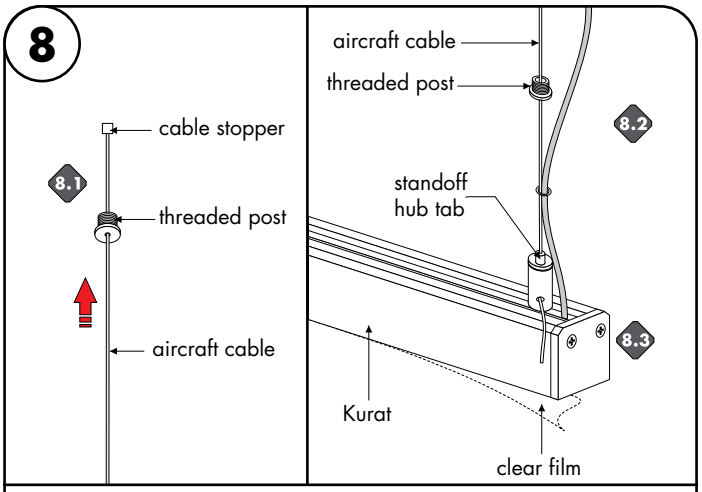

8.1 Untangle each aircraft cable and insert into the threaded post until the cable stopper.

8.2 Push on the standoff hub tab and feed the aircraft cable into the standoff hub until necessary. Release tab to secure in place. *For the aircraft cable closest to the power cable slide through the o-rings on the power cable first.*

8.3 Remove the clear protective film from the face of the lens.

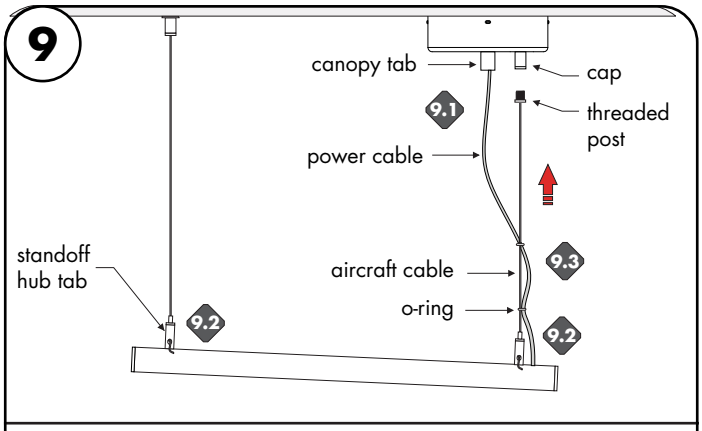

9.1 Tighten each threaded post into a cap, one will be on the canopy and other(s) on the ceiling. If fixture not leveled, adjustments can be made by pushing on the standoff hub tab. Then either feed more cable into the standoff hub or pull out cable from the standoff hub and release to secure. In addition If power wire is sagging, feed into the canopy. By pressing on the tab on the canopy and feed until necessary.

9.2 Cut off any extra aircraft cable from the standoff hub hole.

9.3 If necessary make any final adjustments to the cables use the o-rings for a cleaner look.

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Kurat - Installation Instructions

Models KUR-XX-R

Please read all instructions prior to installation and keep for future reference!


1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.


REV0.2
01272026

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Integral Ecosystem Power Supply

1

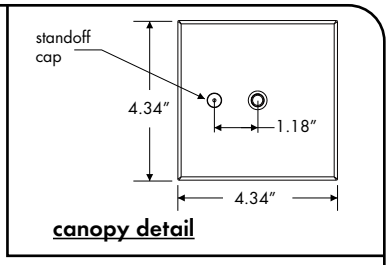


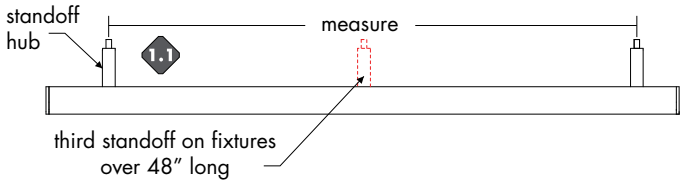

Note: More than one person is recommended for this installation.

1.1 Determine length from the canopy to the standoff hub. Then mark this location to the ceiling. Make additional marks if using more than one standoffs. Use canopy detail to slighting off center standoff hub.

2

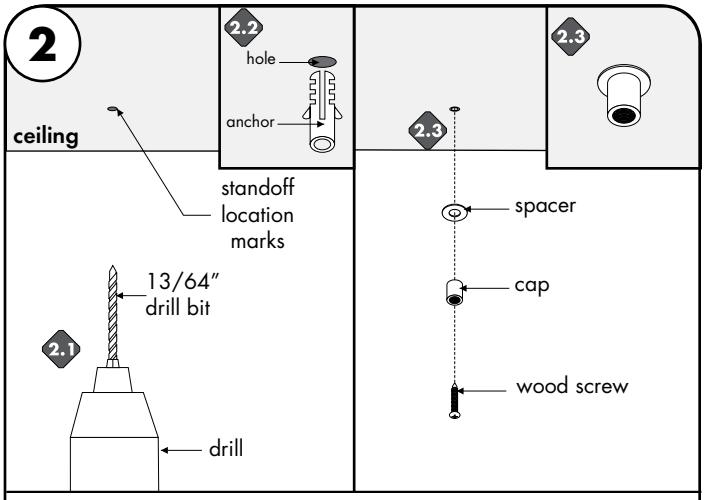


2.1 On the marked location(s), make a hole using a 13/64" drill bit.


2.2 Insert the anchor into the hole and push completely in.

2.3 Insert wood screw through cap & washer and then tighten to secure into the anchors.

3

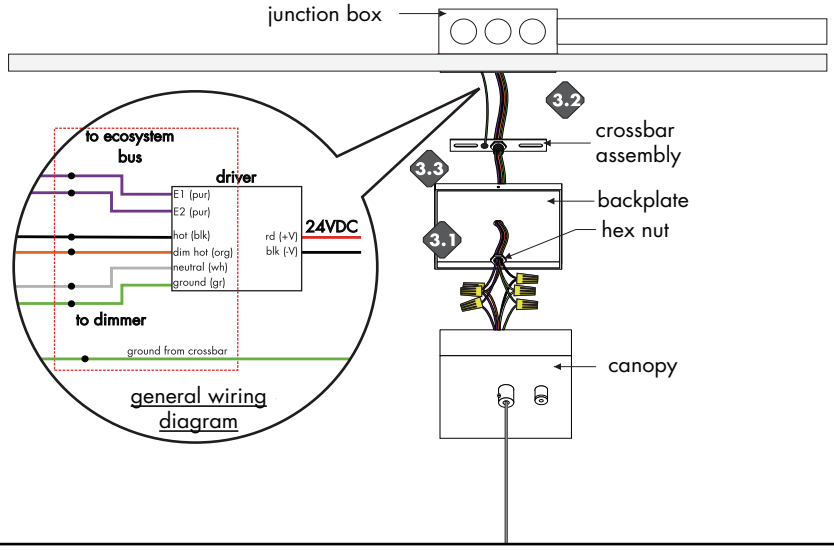

Note: Prior to installing fixture to power, cable must be prepared to go inside crossbar assembly. If this step is skipped metal sleeve will tangle up.

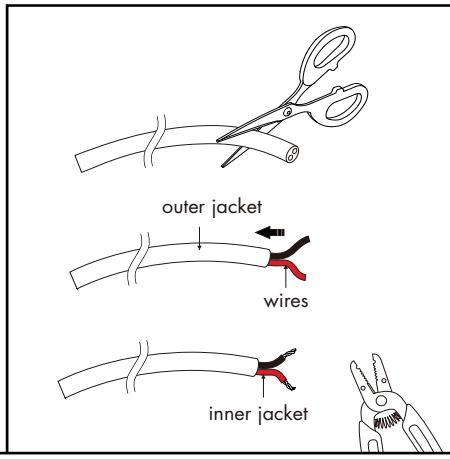

3.1 Insert the power wires into the crossbar assembly, backplate, and hex nut.

3.2 Refer to the wiring diagram and make all necessary connections from the power wires to the canopy driver wires.

3.3 Connect to ground in accordance with local electrical codes.

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE


Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


Integral Ecosystem Power Supply

4

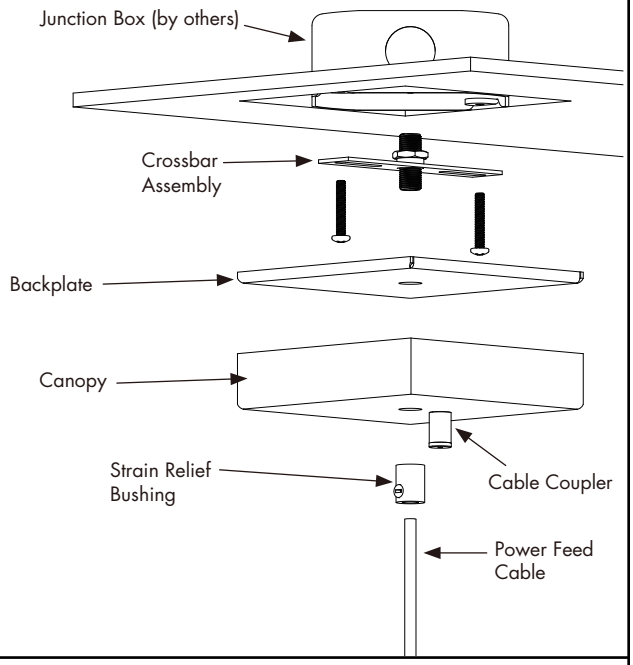


4.1 Route the power feed cable through the strain relief bushing, canopy cover., and crossbar assembly

5

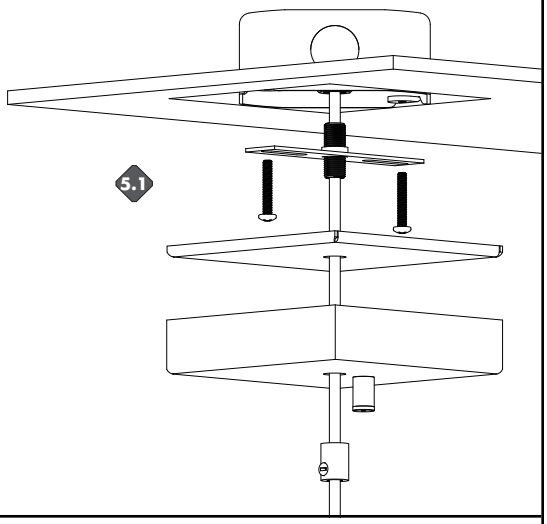


5.1 Connect power feed cable wires, per image above, to wires from the power supply. Insert terminations into the junction box.

6

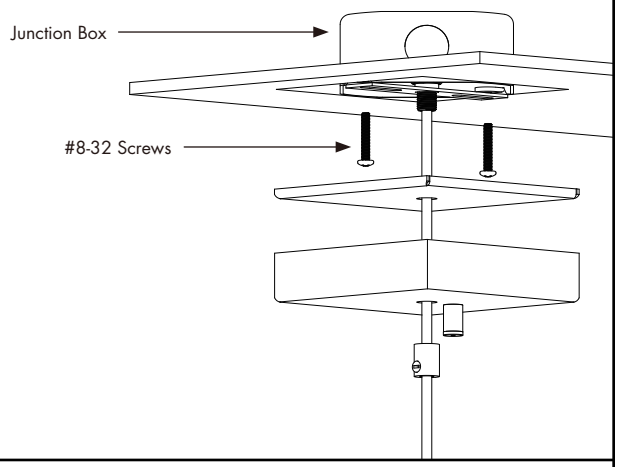

6.1 Align the crossbar to the junction box holes, and secure using the provided two #8-32 screws.

7

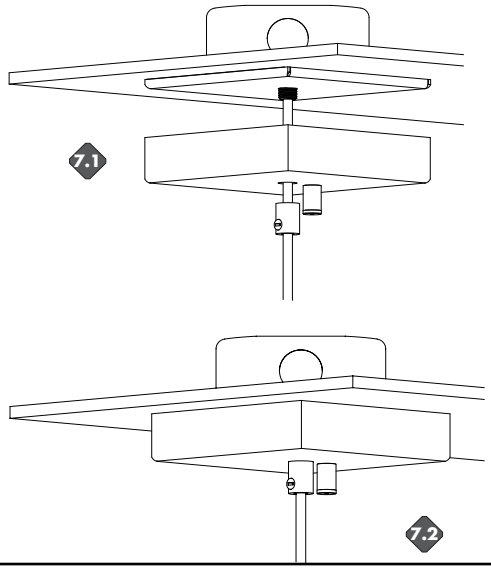

7.1 Slide the canopy cover up to the crossbar and secure by threading the strain relief bushing onto the crossbar assembly.

7.2 Tighten the set screw on the strain relief bushing to secure the position of the power cable.


*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


Integral Ecosystem Power Supply

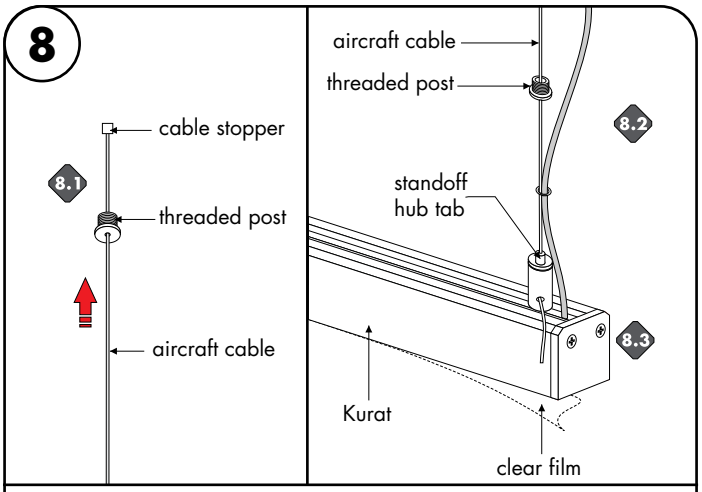

8.1 Untangle each aircraft cable and insert into the threaded post until the cable stopper.

8.2 Push on the standoff hub tab and feed the aircraft cable into the standoff hub until necessary. Release tab to secure in place. *For the aircraft cable closest to the power cable slide through the o-rings on the power cable first.*

8.3 Remove the clear protective film from the face of the lens.

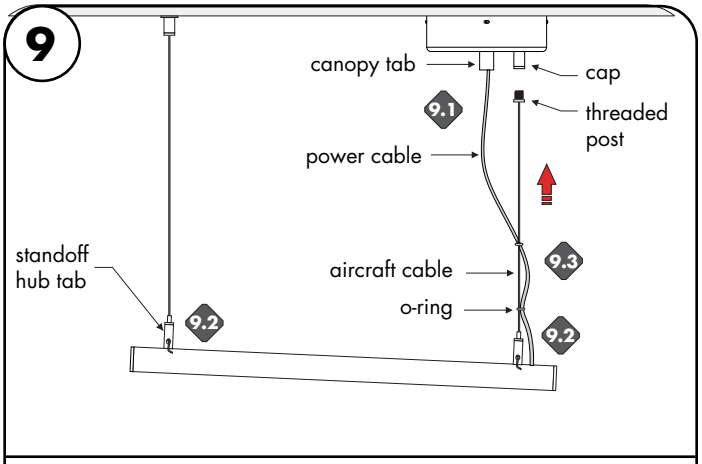

9.1 Tighten each threaded post into a cap, one will be on the canopy and other(s) on the ceiling. If fixture not leveled, adjustments can be made by pushing on the standoff hub tab. Then either feed more cable into the standoff hub or pull out cable from the standoff hub and release to secure.

9.2 Slide the backplate up to the crossbar and secure by tightening the hex nut into the crossbar.

9.3 If necessary make any final adjustments to the cables use the o-rings for a cleaner look.

*LUMINII RESERVES THE RIGHTS TO CHANGE SPECIFICATION & INSTRUCTION WITHOUT NOTICE

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK
3. USE ONLY WITH CLASS 2 POWER UNIT. UTILISER SEULEMENT AVEC LA CLASSE 2 UNITE D'ALIMENTATION ELECTRIQUE.
4. FIXTURE SHOULD BE INSTALLED BY TWO PEOPLE.

luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Power Supply Wiring Diagram

Note: *Prior to installation all 24VDC wires must be present near fixture. Refer to the power supply installation instructions for additional information.*

Static White
Wiring Diagram PDF

RGB/RGBW
Wiring Diagram PDF

Warm Dim
Wiring Diagram PDF

Pixel
Wiring Diagram PDF

Tunable White
Wiring Diagram PDF